


KIT BACK CLAMP (for Promecam System)

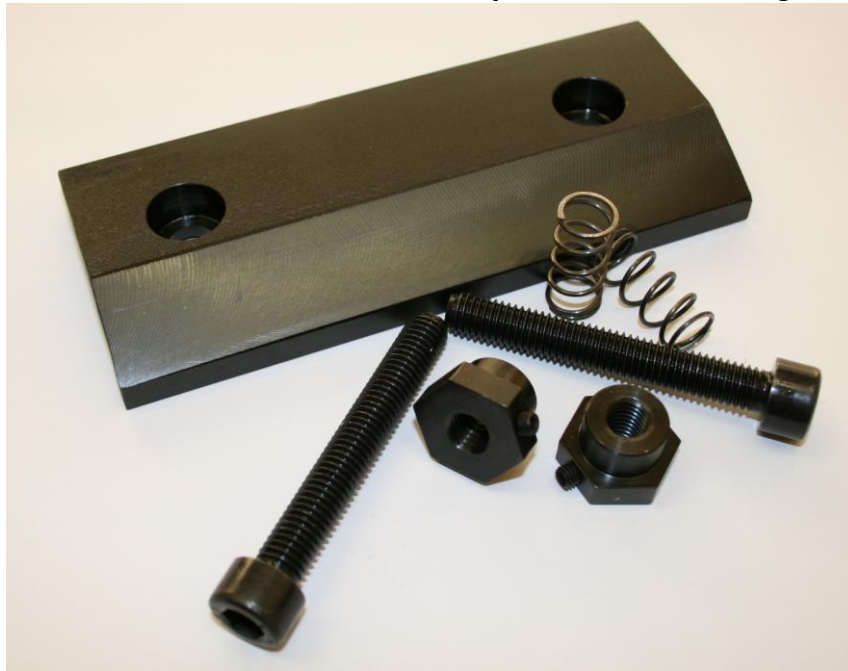

The BACK CLAMP KIT includes:

- 1 Clamp ST-43 x 150 m/m, with security
- 2 Screws Allen of M10 x 70 m/m
- 2 Springs of 13 x 30 m/m
- 2 Special nuts, with hexagonal head

Easy mounting in 4 steps



- 0 Intermediary with actual clamp
- 1 Removing of the existing screws
- 2 Mounting of the old clamp with the new screws and the old springs
- 3 Installation of the back clamp with the new springs and mounting of the special nut with the wrench of 22
- 4 Tighten of the special nut stud

Once installed the **BACK CLAMP KIT**, when we tighten the screw clockwise we press the front clamp and when we tighten in counter clockwise we press the back clamp. All operations are done from the front part.

